

OWNER'S MANUAL

RBI (ROLL BAR ILLUMINATION) TRACTOR LIGHT BAR

Thank you for your purchase of the Custer Products RBI Tractor Light Bar. Our goal for this product is to increase your ability to operate your tractor after dark, greatly enhancing safety and productivity. We've designed the package to be quick and near-effortless to install by following these basic steps.

Step 1

Find a suitable location for the light bar. We've found the optimum placement is underneath the roll bar with the lights pointed toward the front of the tractor. Once you've found where you want it, center it and let the magnets do their job slowly moving the light bar to the ROPS (roll over protection system). Be prepared for it to abruptly attach, so make sure your fingers aren't between the magnets and the roll bar when that happens. Once the bar is attached to the roll bar near where you want it you can scoot it to the exact desired location. The magnets will keep the light bar in place, even with vibration inherent with tractors. The light bar and connections are sealed and designed to be outside in all weather conditions.

Step 2

Position the switch where it can easily be reached from the seat and attach it to a metal portion of the tractor. We've found the best location for the switch is inside the roll bar where it is protected from limbs and other objects that might damage it. The switch is also sealed and waterproof so being out in the elements won't hurt it.

Step 3

This is the tough part. Uncoil the long wire with fuse and connections and feed it through the tractor to the battery. If the tractor has a battery mounted near the operator that won't be a very long job and keeping the wire protected will be easy. If the battery is in front, run the light wire along the transmission and engine so it's protected from brush, especially if the tractor is used to operate a rotary cutter. The best bet is to find the part of the wiring harness that runs from the back to the front of the tractor and follow that lead. Those wires were put in place by the manufacturer for maximum protection and if you can find them, run the RBI Light Bar wires with them, zip tying them in place to insure they stay put. Make sure you avoid items that get hot (like the radiator) and coil up any excess wire in an out-of-the-way place and zip tie together.

Step 4

Connect the black wire to the positive terminal and the white wire to the negative terminal of the battery (if they're switched it won't work). Test the light to make sure it works. Congratulations, you're finished and the light is ready to light up your world!

You'll notice that there is extra hardware in the kit. If you want to mount the bar in a different non-magnetic location, or alter the way it mounts you may use this hardware for custom applications.

Warranty

The RBI Tractor LED 14” Light Bar has a 3 Year Limited Warranty. If the light should fail to function properly, please contact our warranty department at (800) 490-3158 from 8 am to 4:30 pm EST. It’s appropriate to check the fuse at the battery to make sure it’s not blown, but do not try to disassemble the light or wiring harness. Unfortunately, any time the light itself has been unsealed, any warranty is voided. You can also contact Mike at mike@asktractormike.com. Warranty issues are uncommon because of the quality of the product.

Returns

Any and all returns must be authorized by Custer Products. Limited Warranty items will be tested, repaired and returned whenever possible. If the product is deemed defective and within warranty, Custer Products will have the option to replace or credit the lowest product selling price within the warranty period.

Restocking Charge

A 15% restocking charge will be assessed to any non-defective product return

Limited Warranty

Custer Products Ltd. warrants its products to be free from defects in material and workmanship under normal use and services as set forth in this Limited Warranty. Custer warrants to the original purchaser only of each new product made by Custer which proves to be defective in material or workmanship within the limited warranty period from the date of shipment. Custer will, at Custer’s option repair or replace without charge upon return to Custer of the defective product provided any defect in the product is brought to the attention of Custer within the terms of this limited warranty period. The above limited warranty does not apply, and no warranty, either express or implied shall be applicable (a) to damage resulting from accident, alteration, misuse or abuse; (b) if the product is not installed, operated and maintained according to procedures recommended by Custer; or (c) if the serial number, date code, or other identifying marks affixed to the product by Custer are removed, obliterated or defaced. In no case shall the limited warranty be extended to defects in materials components (including but not limited to bulbs), or services furnished by third parties nor to the installation of the product performed by third parties. Any repairs made to any Custer’s products, components or any parts thereof are replaced or altered or any attachments are added to any Custer’s products or components during the warranty period by anyone other than an authorized Custer distributor in accordance with service manuals, parts, accessories, or attachments, authorized by Custer for use in Custer’s products, the purchaser shall pay for such repairs, parts, attachments and alterations without recourse against Custer, and Custer shall be relieved of responsibility for fulfillment of the limited warranty with respect to such affected products or components.

Please address any questions or comments to mike@asktractormike.com. We welcome any input into ways of improving your satisfaction with our products. Thank you for your business!